



Official Lane Maintenance and Capital Equipment Provider



ENVOY



AUTHORITY22®

Select Machine

Pattern Information

Date

Pattern Type

Pattern Difficulty

Pattern Designer

Pattern Volume (ml)

Surface Information

Surface Type

Surface Brand

Age

Pattern Parameters

Pattern Number

Pattern Name

Mode

Forward Speed

Start Cleaner Spray

Start Squeegee

Start Oiling

Split Pattern

Supplies Information

Lane Cleaner

Cleaner Mixture Ratio

Cleaner Transition Distance Authority22

Cleaner Spray End Distance Envoy

Lane Conditioner

Notes

Zone	1	2	3	4	5	6	7	8
Zone End Distance	11	20	27	32	37			
Zone Ratio	L 2,1 : 1	3,1 : 1	2,2 : 1	1,5 : 1	1,0 : 1	### : 1	### : 1	### : 1
	R 2,1 : 1	3,1 : 1	2,2 : 1	1,8 : 1	1,0 : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	13,51	6,42	3,38	1,50	0,00	0,00	0,00	0,00

ZONE	7 Pin Side														Board Number								10 Pin Side																		
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1		
1	25	30	35	40	45	50	60	75	90	95	95	95	95	95	95	100	100	100	100	100	100	100	100	95	95	95	95	95	95	95	90	75	60	50	45	40	35	30	25		
2	15	15	17	19	21	25	29	33	41	49	53	53	53	60	70	70	70	70	70	70	70	70	70	60	53	53	53	53	49	41	33	29	25	21	19	17	15	15			
3	12	12	12	14	16	20	24	28	32	36	39	39	39	39	39	39	39	39	39	39	39	39	39	39	39	39	39	39	36	32	28	24	20	16	14	12	12	12			
4	10	10	11	12	13	16	19	21	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	21	18	15	11	8	8	8	8			
5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1			
6																																									
7																																									
8																																									

